


MD monitoring:			
Charge air temp	T	MD	Monitoring Diesel set
Charge air pres	P	S/S	Start/stop function
Exhaust temp	T	A	Alarm
Fuel consumption	litres/h	FD	Frequency DM
Temp air inlet container	T	DDB	Dynamic Dump load Bank
Alarm - stop		F _G	DDB Frequency
Temp cooling water	H T A A ₁ S	C	Clutch
Pres lubrication oil	L P A A ₁ S	D _P	Diesel preheater
Coolant level	L L A A ₁ S	D _C	Diesel charger for battery
Fuel level	L L A A ₁ S	C _B	Cooling blower
Over speed	- O A - S	G _R	Alternator control

Drw. Control Panel	No 005-0-0000	25 September 2006
Customer Name	Project Number - Place	
VESTESSEN A/S Gunnar Clausens Vej 11, 1 DK-8260 Viby J Tel +45 86 30 06 01	 Wind Diesel System electricity diagram for WD Generator set	